

# Injection Style Techkit

With Separate Injection Rod

## Instructions For Use:


### CAUTION!

Wear eye protection when using these cartridges.


If rod is assembled skip step 1.



**1** Remove cap from cartridge and carefully screw on the injection rod with three clockwise turns being careful not to push mixing head (located 1/2" down) down the barrel. Hold cartridge tightly at the neck to prevent mix head from spinning while threading rod into mix head.

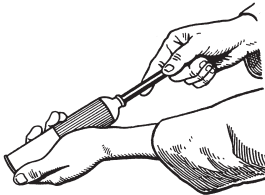


**2** Push injection rod approximately 1/2 way into kit.

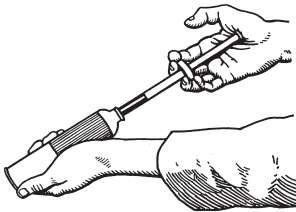


**3** Place ramrod in hole at top of injection rod, and gently push down introducing catalyst into base resin. If possible inject catalyst at several places in cartridge. **CAUTION!** Do not force ramrod! Use firm but gentle pressure.



**4** Push mixing rod to bottom of the cartridge and begin stroking with a clockwise twisting motion from top to bottom. Mix for at least 60 strokes (a stroke being a complete in and out motion), or until material is uniform. Hold back cap while mixing.

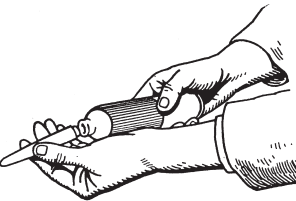

**5** Hold cartridge at the neck and unscrew injection rod with three counter-clockwise turns and discard. Screw nozzle clockwise into cartridge, remove bottom flange cap.

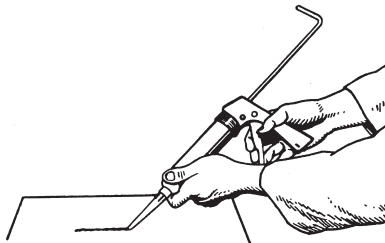

**6** Place cartridge in gun and dispense resin.

# KitPackers®

AN ELLSWORTH ADHESIVES COMPANY 

262-253-5900 • 866-322-8322

N117 W18711 Fulton Drive  
Germantown, WI 53022